


# FiloSlim injection valve

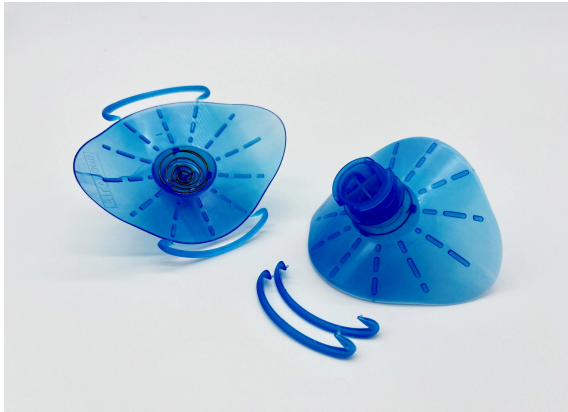

The injection valve is wrapped under the tape and has a special closure to prevent injected resin from flowing back.

The injection valve's design enables you to fill the cable joint with either the injection pump or by hand directly from the resin packaging.

Place the resin packaging on the valve and open it with a quarter turn. This manoeuvre anchors the packaging to the valve and creates a leak proof connection.

Once the cable joint is filled, remove the packaging with a reverse quarter turn. This simple action ensures that both the injection valve and the resin packaging are rendered completely leak proof. Thus, any remaining resin in the package has not been exposed to air and can still be used in another cable joint.

PATENTED

## Features

- Hybrid filling system
- 100% leak-proof and clean process
- Injection valve and resin packaging reseal when removed from a connection
- Contoured to enable proper positioning on a cable joint
- The underside is equipped with small bumps to grip the mesh
- Oval shaped for simple and leak proof taping of the joint
- Handy hooks temporarily secure the mesh

## Specifications

Materiaal	Polyethyleen
Binnendiameter doorlaat	14,5mm
afmetingen grondplaat	70 x 80mm (ovaal)
Uitvoering	Geschikt voor alle gangbare typen inspuitnippels 12,2mm.
Ventielconstructie	Geschikt voor het FiloSlim systeem én alle gangbare typen inspuitnippels 12,2mm. Ventielconstructie voorzien van terugslagklep ter voorkoming van lekkage van de kunsthars uit de wikkelmof.

## Products

Art.nr.	Product Name	Order unit
80560	FiloSlim injection valve	10 pcs/bag